

# PILOTSEAL

## 5 EASY STEPS FITTING INSTRUCTIONS

### IMPORTANT

### FITTER PLEASE READ AND FOLLOW

1. REMOVE OLD GASKET & **CLEAN** BOILER CASING & COVER PLATE JOINTING SURFACES
2. **DO NOT** USE ANY GREASE, ADHESIVE OR JOINTING COMPOUND
3. **ENSURE CORRECT SIZE "PILOTSEAL" GASKET** IS USED. INSIDE DIAMETERS MUST FIT SPIGOT ON COVER PLATE SNUGLY & ANY OVERHANG ON OUTSIDE OF GASKET SHOULD BE MINIMAL.
4. KEEP COVER PLATE CENTRAL WITHIN APERTURE & TIGHTEN CRAB CLAMP BOLT. **TIGHTEN ONLY SUFFICIENTLY TO AVOID LEAKAGE. THIS IS VITAL TO AVOID OVERLOAD OF RUBBER GASKET WHEN BOILER PRESSURE IS ACHIEVED**
5. MAINTAIN LIGHT TENSION ON BOLT DURING SERVICE PERIOD (NORMALLY 12 MONTHS)